



PIPE FRICTION CHART

- ① Begin with viscosity.
- ② Intersect with Pipe Size. Move horizontally to GPM.
- ③ Move Vertically to
- ④ read PSI/FT and multiply by feet of pipe, —or
- ⑤ move vertically to feet of pipe and then horizontally to
- ⑥ Read pressure drop in PSI

*Curves are conservatively based on high flow rates in the Turbulent Flow Zone.
If more accurate values are needed consult hydraulic references.